


Medium Range Single Point Load Cell

SPB-4

Features

- Ranges 50kg to 250kg.
 - Anodised Aluminium Construction.
 - Environmentally Sealed to IP67
 - High Accuracy ($<\pm 0.02\%$)
 - Suitable for use in platforms, maximum size 400mm x 400mm
-

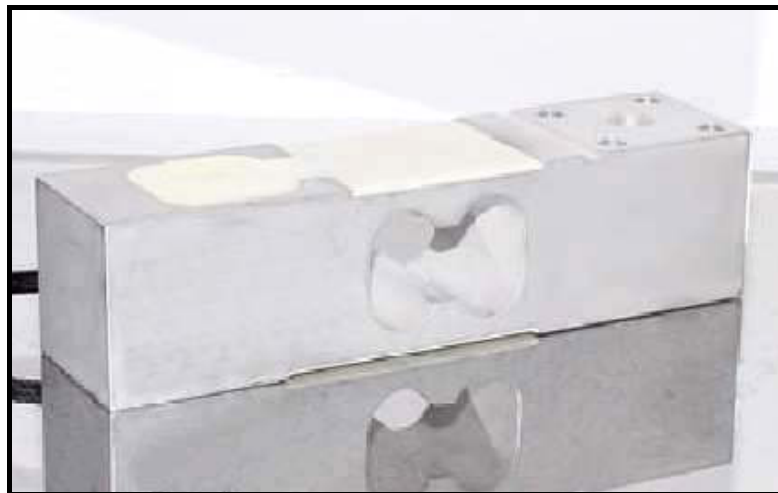

Description

The SPB-4 is a medium range anodised aluminium alloy single point load cell, which has been specifically designed for platform weighing applications, although it is equally suited to other weighing and force measurement applications where high accuracy is required from a low range product.

The SPB-4 is suitable for use in platforms with sizes up to 400mm x 400mm. It is environmentally sealed as standard to IP67.

The SPB-4 series can be supplied on its own or combined with our extensive range of instrumentation to provide a complete load monitoring system.



Digitimer Limited

37 Hydeway, Welwyn Garden City, AL7 3BE, UK

Tel: 01707 328347 Fax: 01707 373153

Email: sales@digitimer.com

